

## Filter Data Sheet

*GGD<sub>grade</sub> Fiber Glass Depth Media Filter Cartridges  
engineered and manufactured for maximum efficiency and value*

**Dist. by: H.R. Peterson Co. - 814 Prior Ave. No. - St. Paul, MN 55104**  
**Telephone: 651-646-4529 Toll Free: 1-800-646-4505 Fax: 651-646-8792**

GGD grade Fiber Glass Depth cartridges are designed for general purpose use wherever a cost effective pleated Fiber Glass Depth filter is required. Designed to hold the maximum amount of filter media that can be completely and effectively utilized in a cartridge, GGD filters lower the cost of filtration. GGD cartridges are flushed with 17+ megohm-cm water to remove potential extraneous manufacturing debris. These cartridge modules are also individually tested. Priced below special purpose cartridges, GGD cartridges are still manufactured with the same careful attention to both quality and performance.

### Flow Rate

The following table represents typical water flow at a one psi (69 mbar) pressure differential across a single 10 inch cartridge element. The test fluid is water at ambient temperature. Extrapolation for housings with multiple elements and higher pressure drops is acceptable, but as flows increase the pressure drop of the housing becomes more apparent.

Pore Size	0.30 µm	0.50 µm	1.0 µm	2 µm	3 µm
GPM	3.0	5.0	8.0	10.0	12.0

### Dimensions


**Length:** .....10 to 40 inches (25.4 to 101.6 cm) nominal  
**Outside Diameter:** .....2.75 inches (7.0 cm) nominal

### Maximum Differential Pressures

**Forward:** ..... 50 psi (3.4 bar) at 20°C.  
**Reverse:** ..... 40 psi (2.7 bar) at 20°C.

### Ordering Information

The cartridge catalog number is made up of several variable characters i.e. pore size, length, O-ring material, and end cap code. For example: a 1.0 µm, 20 inch (50.8 cm) long cartridge with 2-222, Teflon® Encapsulated Viton O-rings, no spear (flat top) and no 316 SS Ring would be designated as: GGD1\*0N00002T5.

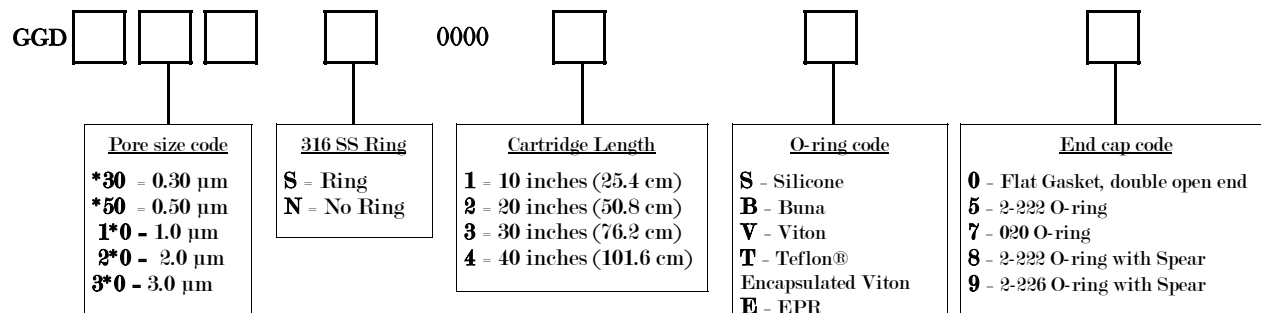

### Construction Materials<sup>1</sup>

**Filtration Media:** .....Fiber Glass  
**Filtration Media Support:** .....Polypropylene  
**End Caps:** .....Polypropylene  
**Center Core:** .....Polypropylene  
**Outer support Cage:** .....Polypropylene  
**O-rings:** Buna, Viton, Silicone, EPR, Teflon® Encapsulated Silicone, Teflon® Encapsulated Viton

<sup>1</sup> All materials of construction are FDA accepted. Final assemblies have been validated to pass USP class 6 Toxicology extractable tests, oxidizable substances for plastics, endotoxin level and other quality tests.

### Sanitization/Sterilization

**Filtered Hot Water:** .....90°C

**Chemical Sanitization :** .....Industry standard concentrations of hydrogen peroxide, paracetic acid, sodium hypochlorite and other selected chemicals. Sanitization protocols designed to extend the useful life of GGD cartridges are available from Critical Process Filtration, Inc.®.

### Integrity Test Information

Cartridges are factory tested for integrity before shipment. Field Duplication of these tests is not practical because of the complexity of the testing process and absence of commercial portable testing equipment.